

55 Gallon (208.20L) 660 lb. (299.37kg) BOTTLING TANK

HH-365



MANN LAKE
WE KNOW BEES

501 1st St S, Hackensack, MN 56452
500 Santa Anita Dr., Woodland, CA 95776
485 Stewart Rd, Wilkes-Barre, PA 18706
1600 Commerce Street, Marshall, TX 75672

Telephone: 800-880-7694
www.mannlakeltd.com


Instructions For Use...

Check to be sure the brass bottling valve, the jacket drain valve and the site glass drain are tight.

Fill your bottling tank's jacket with water through the filling spout. The water level inside the water jacket will be indicated through the site glass.

Make sure your water level is above the honey level at all times. To avoid damage to the heater, the water jacket should never be run empty of water unless it is being prepared for storage.

After adding honey to the tank, plug in the heater and using a flat head screw driver, turn the adjustment on the heater to approximately 110°F (43.33°C). The heater shows the temperature of the water inside the jacket. Monitor the temperature of the honey through the thermometer on the front of the bottling unit. Once your honey reaches the desired temperature (typical bottling occurs at 100-120°F or 37.78-48.89°C) again use your flat head screw driver to adjust the temperature to the point that the heater cycles off.

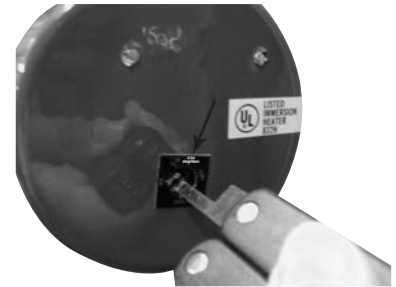

****IMPORTANT-** The longer your honey is exposed to the heat, the darker it will become. Likewise, the hotter you make the honey, the darker it will become.

Do not set your bottling tank directly on concrete. Concrete can tarnish stainless steel and will speed up the corrosion process.

If the tank will be exposed to freezing temperatures, drain the site glass by opening the release valve on the bottom of the brass drain valve.

You may see condensation inside your tank if the water temperature inside the jacket is colder than the air temperature. We suggest you drain your bottling tank if you are not using it for 3-4 days. (Drops in the air temperature can cause the water temperature to cool off and create condensation.)

Wash all equipment before use. Please do not use anything rough and abrasive on the bottling tank. If the tank is still not clean you may use a small amount of dish soap.

Filter Basket and Filter Cloths Are Available To Fit Your Bottling Tank.



One Year Limited Warranty: Mann Lake warrants this product, to original purchaser, for one year from purchase date to be free of defects in materials and workmanship. This warranty is the only written or express warranty given by Mann Lake. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS ARE HEREBY EXCLUDED. Mann Lake's obligation under this warranty is limited to repair or replacement of the product, at its option. IN NO CASE SHALL MANN LAKE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM BREACH OF THIS WARRANTY.



Mann Lake Ltd.

HH-365 660 lb. (299.37 kg.)



BOTTLING TANK

Part List

PART#	DESCRIPTION	QUANTITY	✓
70-700	3/8" (.952 cm) Brass Water Gauge Set of 2	1	
70-707	Sight Glass 5/8" x 29 1/2" (.625 cm x 74.93 cm)	1	
70-711	Non-Polished Rod Protectors For 55 Gals. (208.20L)	1	
70-715	Thermometer 2 1/2" (6.35 cm) Stem	1	
70-725	Drain Plug	1	
HH-410	Brass Valve With Nipple	1	
HD-338	3000 Watt 200 Volt Heater	1	
80-001	Large Oval Mann Lake Label	1	
	Instruction Sheet	1	