
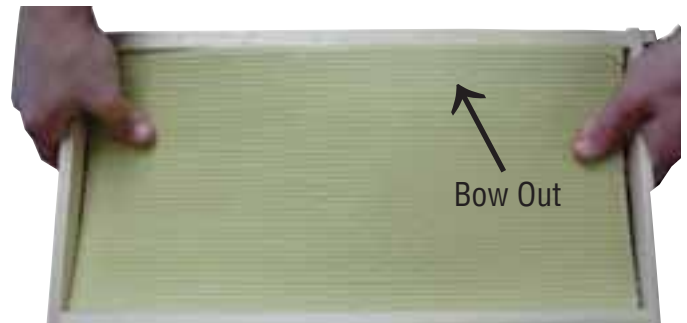


Inserting Rite-Cell® Foundation

You Will Need:

- Assembled Frame
- Rite-Cell® Foundation

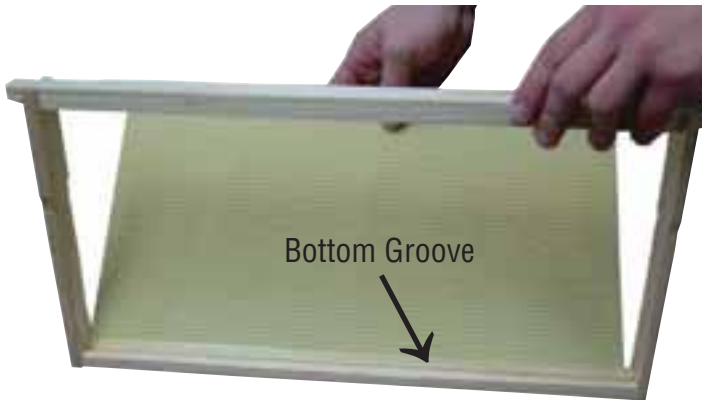

Step One:

Take foundation and insert it into the bottom groove of the frame. As see in the picture above.

Step Two:

Bow the foundation out so you can get it to snap into the top of the frame.



Step Three:

Move your hand down the foundation to snap in to the top bar.


Completed Frame with Rite-Cell® Foundation.

**If you have any questions feel free to call us at Mann Lake Ltd.
800-880-7694 • www.mannlakeltd.com**

You May Also Consider...

Metal Frame Rest:

Used to protect the wood from damage caused by scraping and hive tool wear.

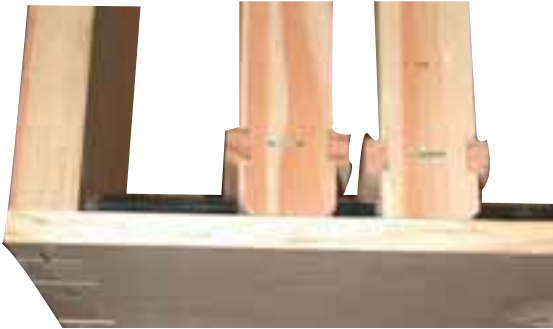

Paint:

- Goes on smoothly
- High blister resistance
- Higher solid content than conventional paints.

Specialty Nails:

These cement and resin coated specialty nails are specifically designed with a small diameter to reduce splitting and cracking during assembly.



We Offer:

- Assembled Boxes.
- Assembled Painted Boxes.
- Assembled Treated Boxes.
- Unassembled Boxes.



Hive Bodies Unassembled

Select Grade

Commercial Grade

Budget Grade

