



# Inserting Wired Wax Foundation

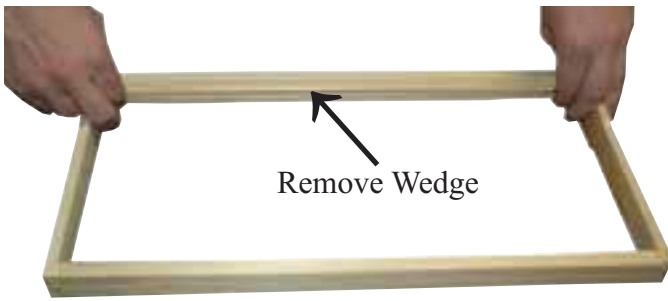

## Step One:

Remove the wedge pieces from the frame.

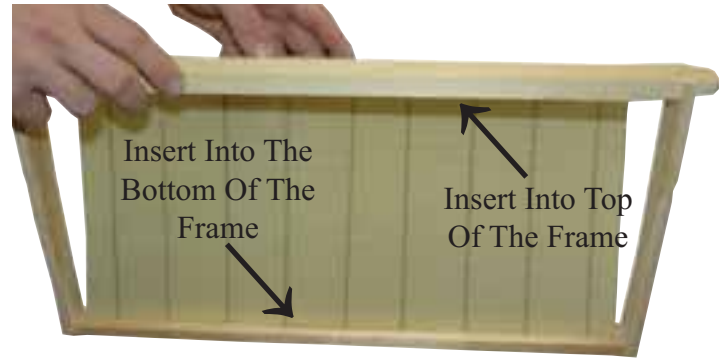

## Step Two:

Insert foundation put the bottom of the foundation into the grooved out area of the bottom of the frame then push the top into the grooved out area of the top of the frame.



## Step Three:

Replace wedge to the top of the frame and nail it in.

If you have any questions feel free to call us at Mann Lake Ltd.  
800-880-7694 • [www.mannlakeltd.com](http://www.mannlakeltd.com)

## You May Also Consider....



### **Metal Frame Rests:**

Used to protect the wood from damage caused by scraping and hive tool wear. **WW-120**



### **10" Hive Tool:**

Is made of a strong spring steel and has a large hook on the end for prying. **HD-588**



### **Frame Spacers:**

Metal spacers used to reduce the number of frames in your super from 10 down to 8 or 9. **WW-130**



### **Bee Brush:**

Has soft bristles to gently remove bees from frames. **HD-660**

# You May Also Consider....

## Unassembled Frames:

Standard outside dimensions works with all uncappers. Fits all standard foundation sizes.



## Specialty Nails:

These cement and resin coated specialty nails are specifically designed with a small diameter to reduce splitting and cracking during assembly.



## We Offer:


- Assembled Boxes.
- Assembled Painted Boxes.
- Assembled Treated Boxes.
- Unassembled Boxes.

## Hive Bodies Unassembled

Select Grade

Commercial Grade

Budget Grade

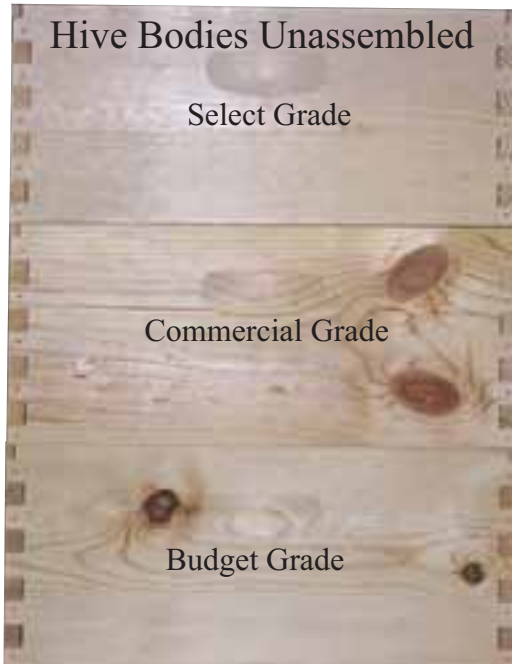

## Paint:

- Goes on smoothly
- High blister resistance
- Higher solid content than conventional paints.



Painted Box



Assembled Box



Treated Box