


# HK-225 10 Frame Comb Honey Super Kit

## Materials Provided:

- (40) Comb Clamshells
- (1) Comb Honey Basics Booklet
- (1) 10 Frame 5 5/8" Assembled Shallow Super
- (1) 10 Pack of Thin Surplus Foundation - 4 3/4" x 16 1/2"
- (10) 5 3/8" Assembled Frames  
Wedge Top/Groove Bottom with Holes
- (50) 5/8" Nails for Wedge Piece
- (1) Small Comb Cutter - Cuts 3 3/4" x 3 3/4"




## How To Insert Wax Foundation

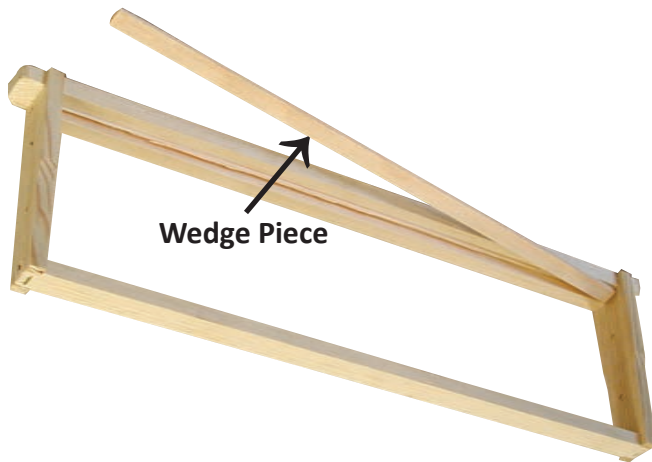

Wedge Piece

### Step One:

Remove the wedge piece from the frame.

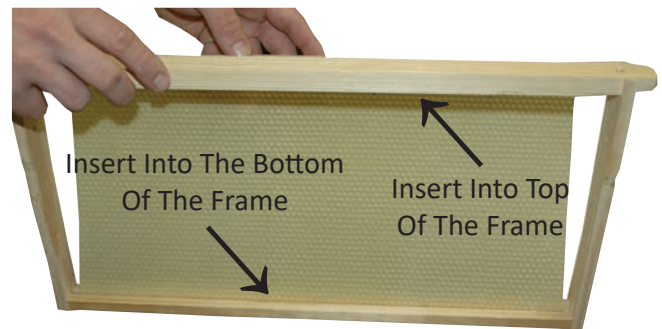

Insert Into The Bottom  
Of The Frame

Insert Into Top  
Of The Frame

### Step Two:

Insert the bottom of the foundation into the groove at the bottom of the frame. Push the top of the foundation into the void left by the wedge at the top of the frame.



Nail In  
Wedge

### Step Three:

Replace wedge at the top of the frame and nail it in.

**MANN LAKE**  
WE KNOW BEES

501 1st St S, Hackensack, MN 56452  
500 Santa Anita Dr, Woodland, CA 95776  
485 Stewart Rd, Wilkes-Barre, PA 18706  
1600 Commerce St, Marshall, TX 75672

Telephone: 800-880-7694  
[www.mannlakeltd.com](http://www.mannlakeltd.com)