


HK-625 8 Frame Comb Honey Super Kit

Materials Provided:

- (32) Comb Clamshells
- (1) Comb Honey Basics Booklet
- (1) 8 Frame 5 5/8" Assembled Shallow Super
- (1) 8 Pack of Thin Surplus Foundation - 4 3/4" x 16 1/2"
- (8) 5 3/8" Assembled Frames
Wedge Top/Groove Bottom with Holes
- (50) 5/8" Nails for Wedge Piece
- (1) Small Comb Cutter - Cuts 3 3/4" x 3 3/4"




How To Insert Wax Foundation

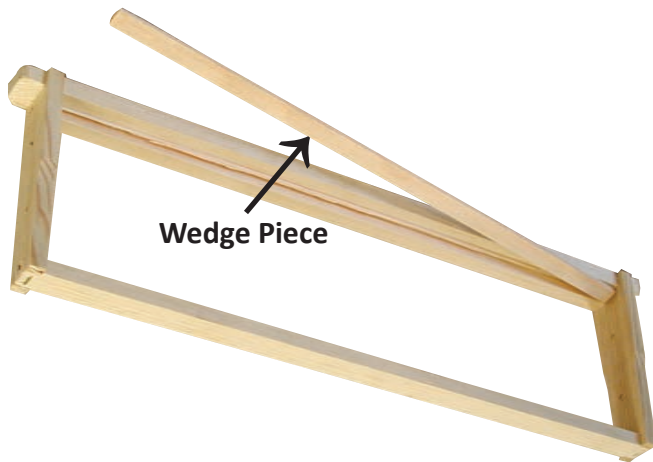

Step One:

Remove the wedge piece from the frame.

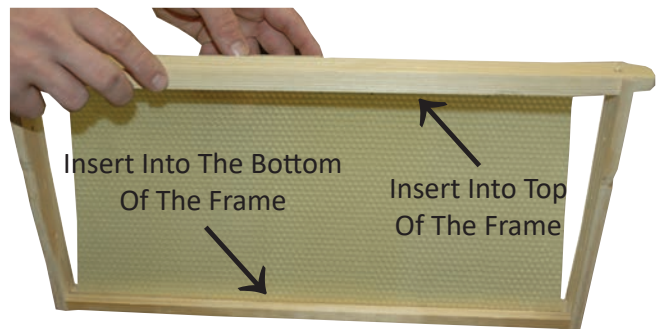

Step Two:

Insert the bottom of the foundation into the groove at the bottom of the frame. Push the top of the foundation into the void left by the wedge at the top of the frame.



Step Three:

Replace wedge at the top of the frame and nail it in.

MANN LAKE
WE KNOW BEES

501 1st St S, Hackensack, MN 56452
500 Santa Anita Dr, Woodland, CA 95776
485 Stewart Rd, Wilkes-Barre, PA 18706
1600 Commerce St, Marshall, TX 75672

Telephone: 800-880-7694
www.mannlakeltd.com