


WW-239 ENTRANCE SHIM ASSEMBLY INSTRUCTIONS

Replacement Parts Item Number	Parts Included	Quantity Included
	3/4" x 16 1/4" Short Side	1
	3/4" x 16 1/4" Short Side W/Entrance	1
	3/4" x 18 7/8" Long Sides	2
	1 7/8" 6 D Nails	4
Additional Items Required For Assembly		
Wood Glue Hammer Building Square		

Matching the lap joints, apply wood glue to each of the joints and secure with the nails that were provided. Use a construction square at the corners to be sure your Entrance Shim is square.

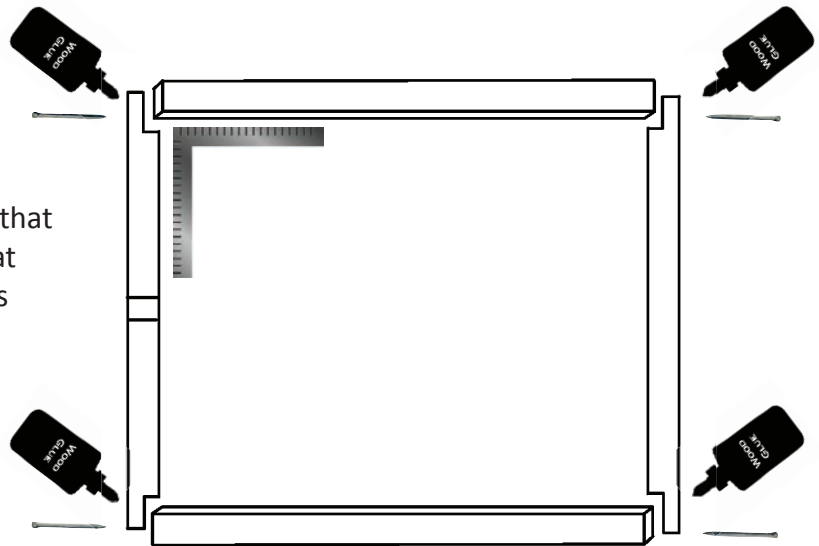

Use your entrance shim between honey supers with drawn comb only. Add a shim between supers 2 and 3 and 4 and 5. Do not place in direct contact with a queen excluder. The shim will provide an additional entrance to the supers relieving congestion at the main hive entrance which can help reduce swarming. Remove the shims along with the supers at harvest time.