



Frame Placement



Holds 3
9 1/8" Frame



Holds 3
6 1/4" Frame



Holds 6
5 11/16" Frame


MOTORIZED 6/3 FRAME EXTRACTOR FROM MANN LAKE LTD.



800-880-7694
Mann Lake Ltd.

ONE YEAR LIMITED WARRANTY: Mann Lake Ltd. warrants this product, to the original purchaser, for one year from the purchase date to be free of defects in materials and workmanship. This warranty is the only written or expressed warranty given by Mann Lake Ltd.. ALL IMPLIED WARRANTIES OR MERCHANTABILITY AND OF FITNESS ARE HEREBY EXCLUDED. Mann Lake's obligation under this warranty is limited to repair or replacement of the product, at it's option. Return the defective product with proof of date of purchase to Mann Lake Ltd. 501 S. 1st Street, Hackensack MN 56452. IN NO CASE SHALL MANN LAKE LTD. BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM BREACH OF THIS WARRANTY.

www.mannlakeltd.com

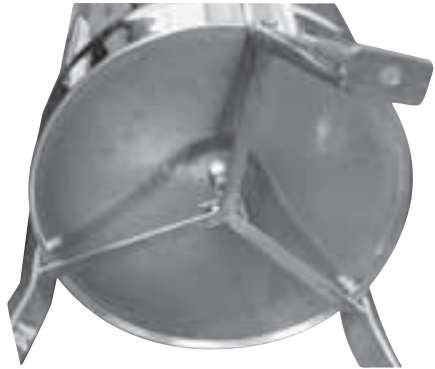

Congratulations on purchasing your new extractor. Shown below are just a few things you need to do before you begin extracting. If you have any questions at all, please feel free to call us at 800-880-7694. Experienced help is only a phone call away.

Attach the legs to the top of the extractor can with the nuts that are provided and tighten with an adjustable wrench. Lay the extractor on its side and attach the leg support to each of the legs with the nuts that are provided. The “feet” of the extractor legs have a hole that can be used to mount the extractor, we suggest mounting to a 4’ x 4’ piece of plywood for stability. The final step is to attach the lid. Insert one side of the plastic cover into the open portion of the hinge located on the crossbar. Slide the lid into the closed portion of the hinge to secure. Repeat with the other side. Now you are ready to begin extracting.

Frames should be uncapped prior to extracting. The load inside the extractor must be balanced in order for the basket to spin properly. The motor on your new extractor is a variable speed motor with a “FULL” mode function.

When using 9 1/8” or 6 1/4” frames with wax foundation, we recommend starting with the switch in the “VAR” position and the dial on “LOW”. Run the extractor for 2-3 minutes each on “LOW,” “ME-

DIUM,” and “HIGH.” At the end of that time, move the switch to “OFF” wait for the basket to stop and flip your frames. Extract side 2 in the same fashion for 3- minutes on each setting. If necessary, repeat the process again on side 1 to remove the last of the honey. Rotating the frame will lessen the occurrence of blowouts in the wax foundation from the weight of the honey.

If plastic foundation is used it is possible to extract each side 100% before turning. Run for 5 minutes each on “LOW,” “MEDIUM,” and “HIGH” then switch to the “FULL” mode for an additional 10-15 minutes.

5 11/16” frames are placed radially as shown on the opposite page. It is not necessary to turn frames placed radially. Run for 5 minutes each with the switch on “VAR” and the dial on “LOW,” “MEDIUM,” and “HIGH” then switch to the “FULL” mode for an additional 10-15 minutes.



Keep your honey gate open when extracting to insure the basket moves freely. Your extractor is not intended to be a storage tank. Promptly move any honey to a storage container or bottling tank.

MANN LAKE LTD.
 HH-200 6/3 FRAME
 MOTORIZED EXTRACTOR

PARTS LIST

PART #	DESCRIPTION	QUANTITY	√
36-155	Plug For Motor	1	
81-701	Motor Mount/Guard For 3 Frame	1	
81-705	Speed Control	1	
81-704	Speed Control Mount	1	
81-700	3 Frame Motor	1	
80-000	Small Mann Lake Label	1	
81-707	Coupling 9 MM	1	
	Lid With****Caution Label On Lid****	1	
80-001	Large Oval Mann Lake Label	1	
36-122	3 MM Allen Wrench	1	
36-123	6 MM Allen Wrench	1	
	Instruction Sheet	1	
INSPECTED BY- _____			

MAY WE ALSO SUGGEST.....



Electric Speed King

Uncapping Knife:

Ready to use and has a fully automatic, non adjustable temperature control. Easy to use
HH-410



Bee Brush:

Soft bristles to gently remove bees from frames. HD-660



Honey Bear Squeeze Bottles:

Our squeeze bottles combining the convenience of a squeeze bottle with the pleasing look of a clear jar.



Plastic Uncapping Tank:

Multi-purpose tank that can be used for just uncapping or uncapping then straining. Will hold 10 frames and comes with complete 1 / 12" honey gate, straining grid and full lid. HH-231



Uncapping Scratcher:

All-purpose metal tool opens capped cells.
HD-465



Hex Glass Jars:

With clear glass you are able to showcase your honey to its true beauty. The Hex Glass Jars are so timeless and elegant your honey will stand out.