

OXALIC ACID VAPORIZER DC-908

For your safety, use gloves, protective eye wear, and a respirator mask for organic vapor. Do not eat, drink, or smoke while handling oxalic acid. Check OSHA, EPA, federal, state and local regulations for use and handling of oxalic acid.

You will need a fully charged car or deep cycle battery and a moist cloth.

Using the measuring spoon, place ½ teaspoon (2 grams) of oxalic acid into the tray of the vaporizer. Insert vaporizer into hive until the handle is touching the bottom board. Place a moist cloth at the entrance.


Attach the leads to your 12 volt battery for 3 minutes and no longer. Let vaporizer cool for 2 minutes, then remove the vaporizer and wipe with a damp cloth. **Do not submerge in water.** Leave the hive sealed for 10 more minutes, then remove the moist cloth.

When to treat: For best results, treat at times when brood rearing is at its lowest.

Do not leave the vaporizer on and unattended as this can damage the vaporizer and may start a fire. The vaporizer reaches very high temperatures and will cause severe burns to skin. Clean the vaporizer after use with a baking soda and water solution to neutralize any oxalic acid residue. Soak rags in a baking soda and water solution, then wash.

Follow all directions and precautions on the oxalic acid bottle, which is not provided in the kit.

Kit comes with oxalic acid vaporizer, N95 organic vapor mask and ½ teaspoon measuring cup.

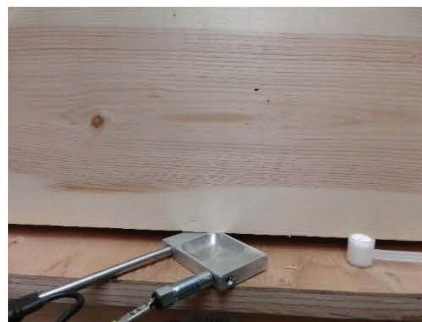

MANN LAKE
WE KNOW BEES

501 1st St S, Hackensack, MN 56452
500 Santa Anita Dr., Woodland, CA 95776
485 Stewart Rd, Wilkes-Barre, PA 18706
1600 Commerce Street, Marshall, TX 75672

Telephone: 800-880-7694
www.mannlakeltd.com